


BARRIER WALL REMOVAL DETAIL

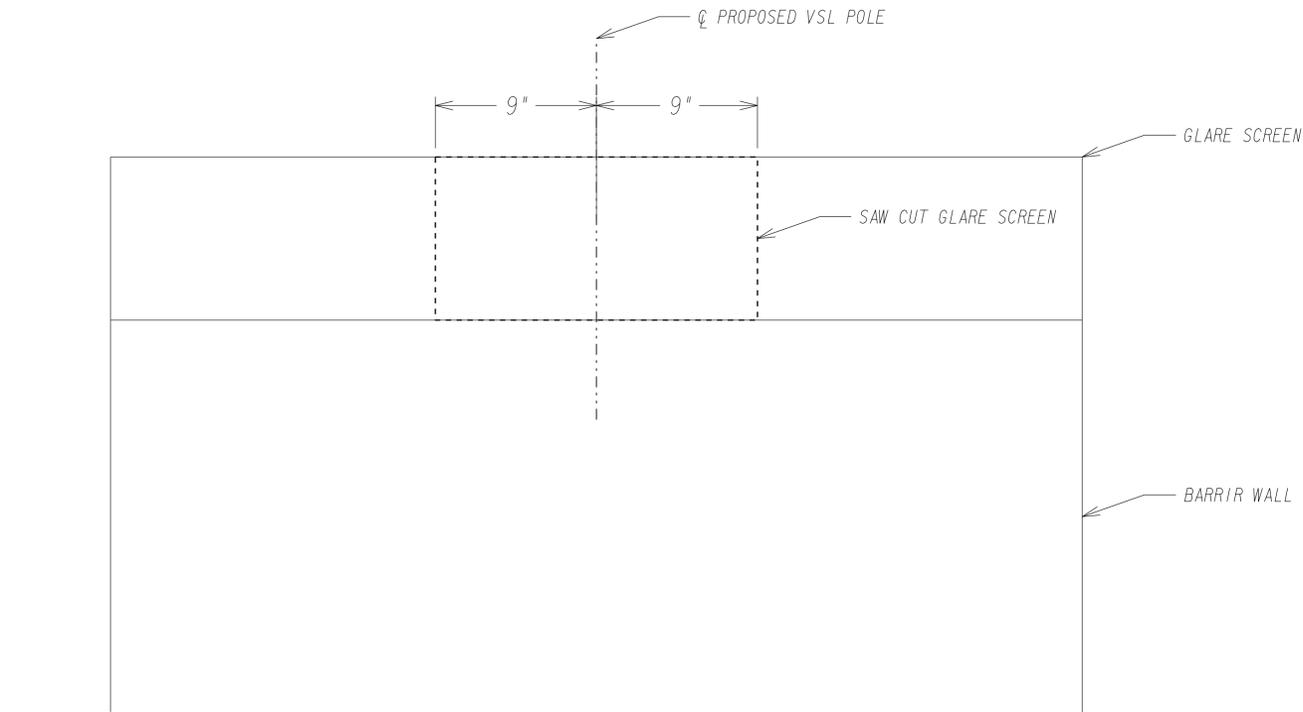

PROFILE / SIDE VIEW
N. T. S.

NOTES:

1. SAWCUT GLARE SCREEN (4' MAX WIDTH CUT)
2. REMOVE CONCRETE GLARE SCREEN WITH JACKHAMMER
3. LEAVE CLEAN SMOOTH SURFACE ON BARRIER WALL DIP
4. CAREFULLY CHIP OUT CONCRETE FROM AROUND EXISTING LIGHT POLE ANCHOR BOLTS.



RELEASED FOR
CONSTRUCTION
10-18-2013

REVISION DATES

STATE OF GEORGIA
DEPARTMENT OF TRANSPORTATION
OFFICE: INNOVATIVE PROGRAM DELIVERY
ITS PLANS

I-285 VSL DESIGN-BUILD

DRAWING No.
28-015