


VOID

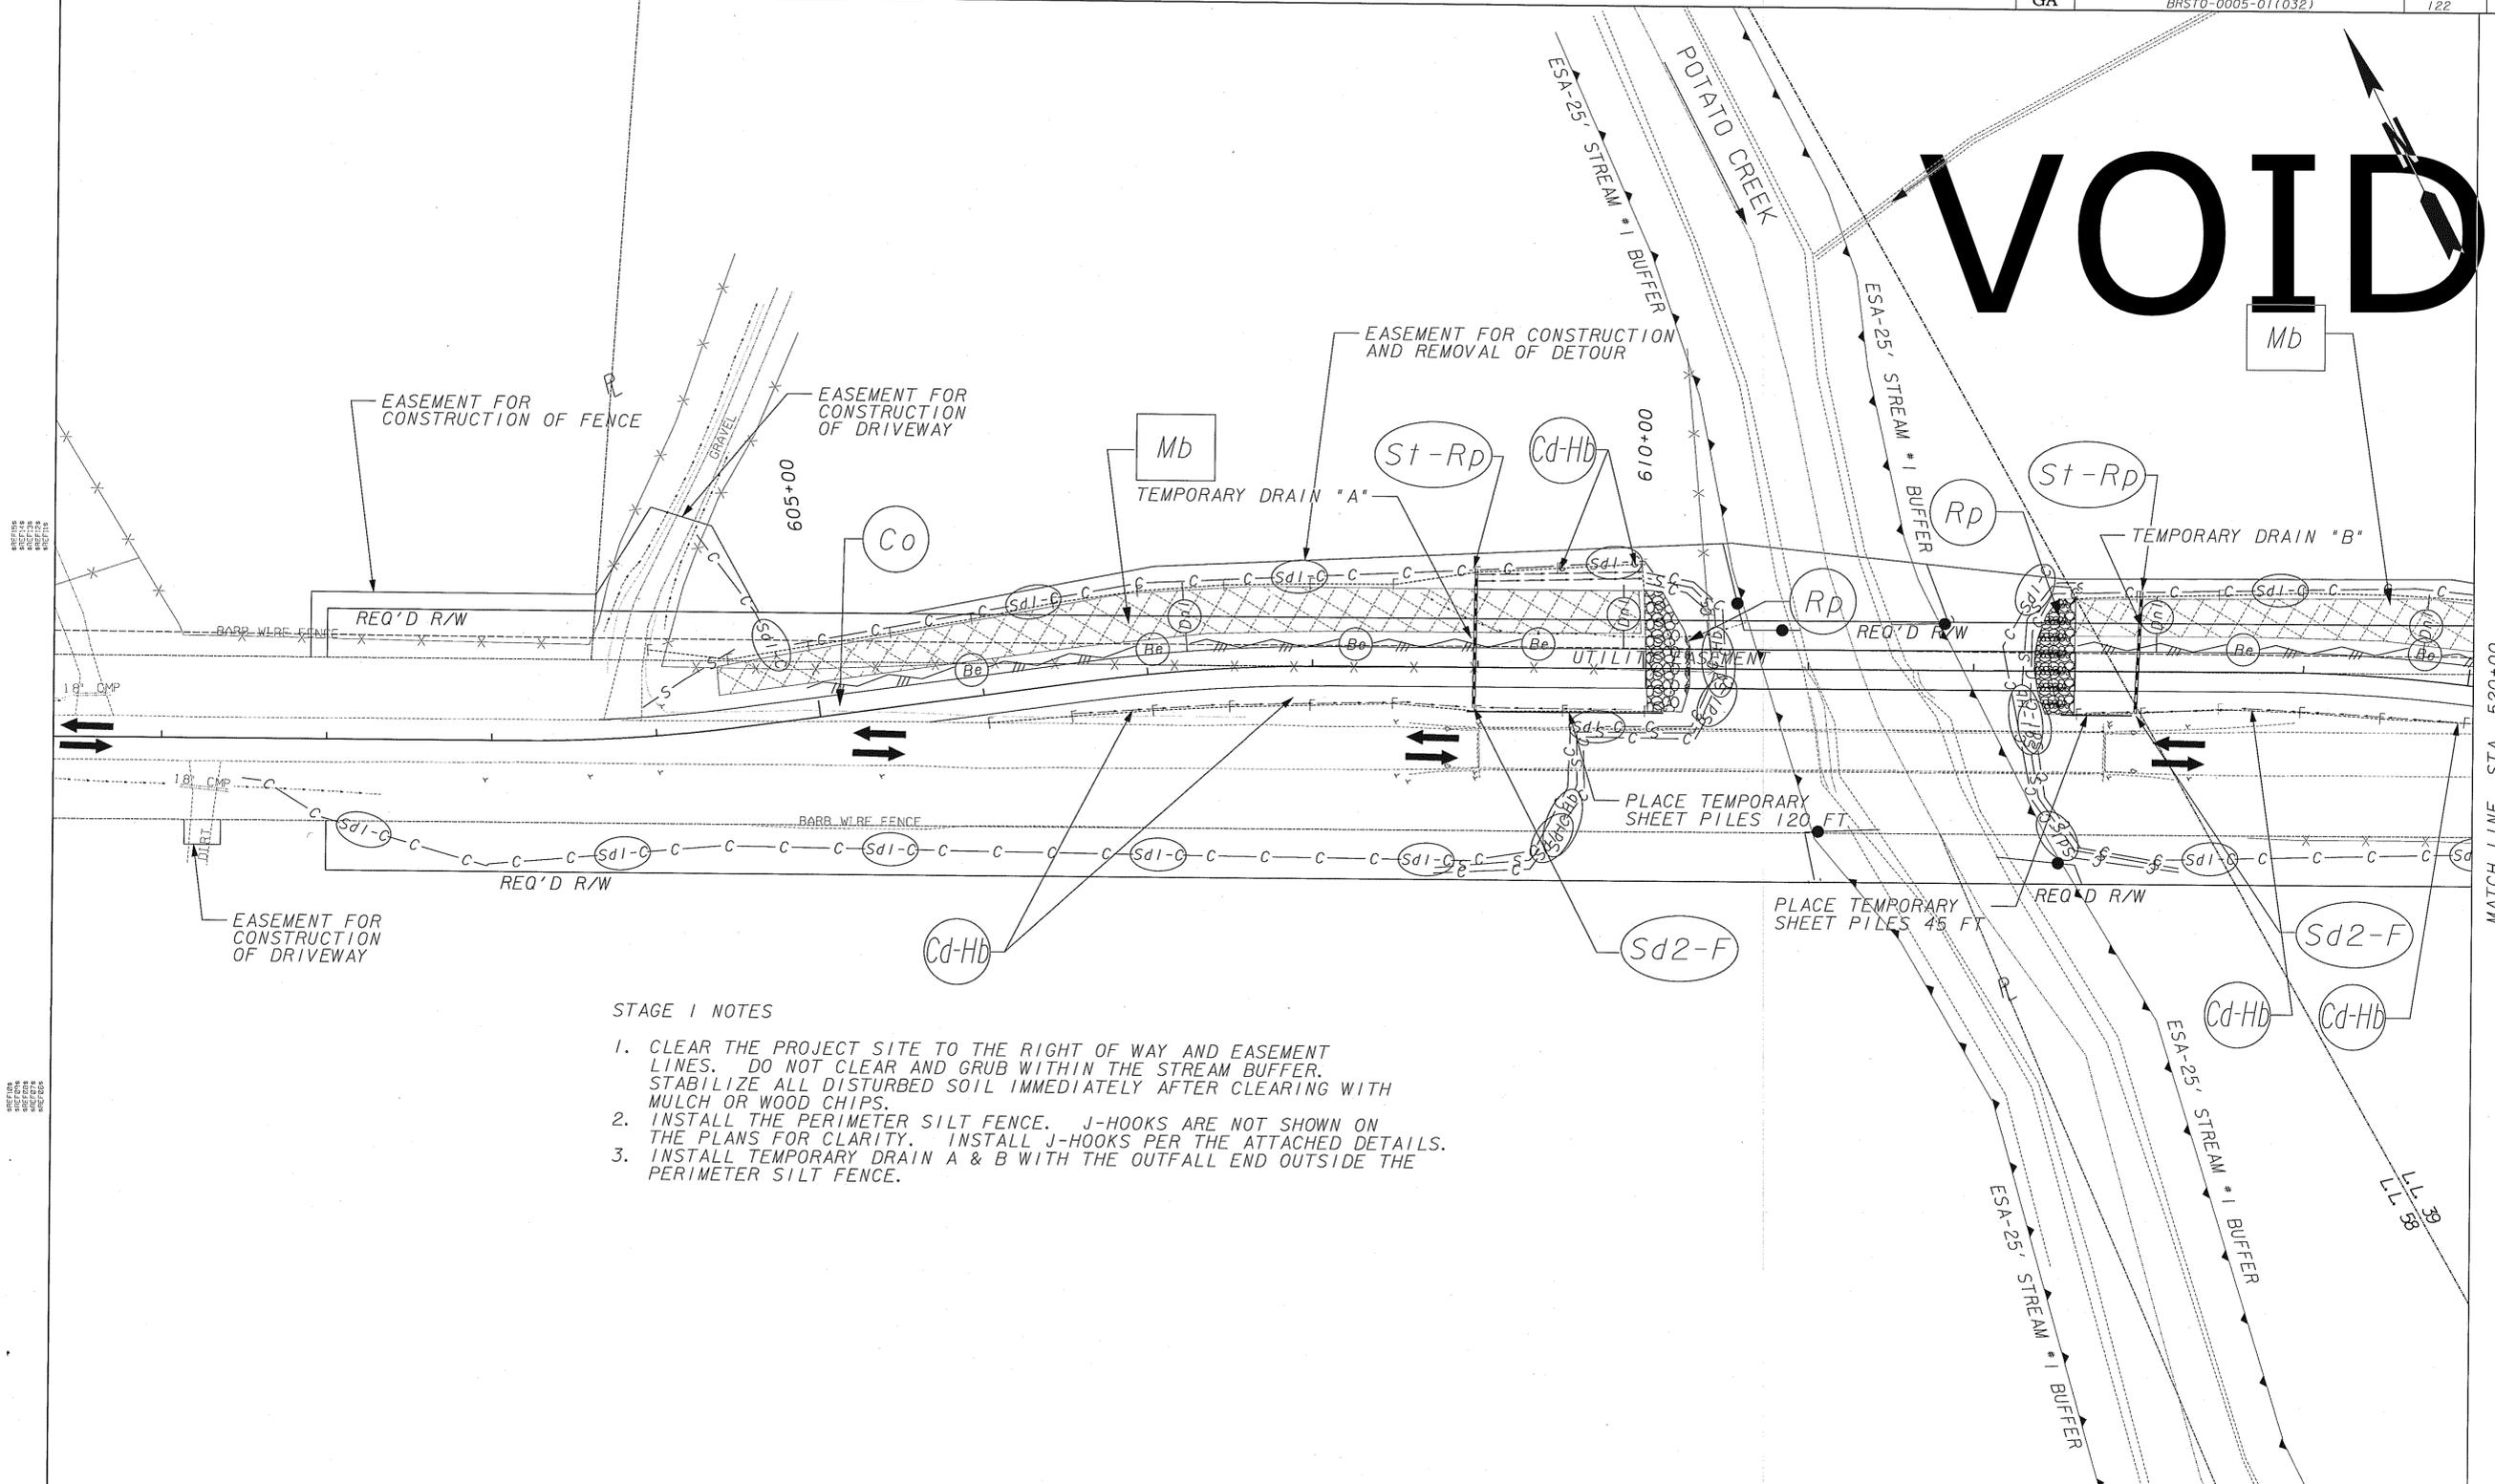

STAGE I NOTES

1. CLEAR THE PROJECT SITE TO THE RIGHT OF WAY AND EASEMENT LINES. DO NOT CLEAR AND GRUB WITHIN THE STREAM BUFFER. STABILIZE ALL DISTURBED SOIL IMMEDIATELY AFTER CLEARING WITH MULCH OR WOOD CHIPS.
2. INSTALL THE PERIMETER SILT FENCE. J-HOOKS ARE NOT SHOWN ON THE PLANS FOR CLARITY. INSTALL J-HOOKS PER THE ATTACHED DETAILS.
3. INSTALL TEMPORARY DRAIN A & B WITH THE OUTFALL END OUTSIDE THE PERIMETER SILT FENCE.

LOWE ENGINEERS

2000 RIVEREDGE PARKWAY, SUITE 400, ATLANTA, GA 30328
 PHONE 770.857.8400 FAX 770.857.8401



REVISION DATES

NO.	DATE	DESCRIPTION

STATE OF GEORGIA
 DEPARTMENT OF TRANSPORTATION
 OFFICE: CONSULTANT DESIGN

STAGE I
BMP LOCATION DETAILS
 SR 18 BRIDGE
 OVER POTATO CREEK

DRAWING No.
54-01