PIEDMONT
γ= 120 PCF
φ= 25 DEGREES
C= 300 PCF

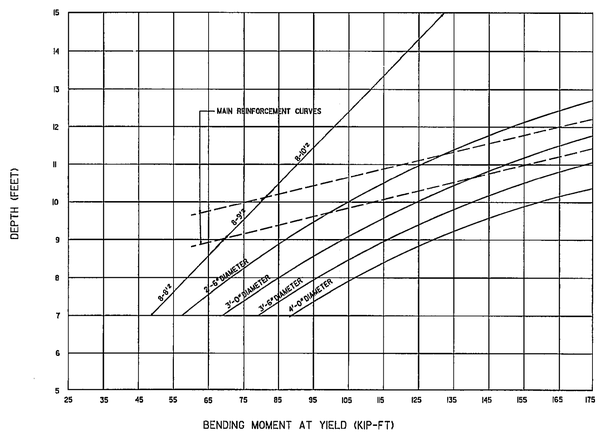

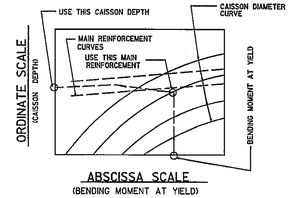

PROCEDURE TO FIND FOOTING SIZE

1. DETERMINE "BENDING MOMENT AT YIELD" FROM APPROVED SHOP DRAWINGS
2. SELECT DIAMETER OF CAISSON.
3. READ "BENDING MOMENT AT YIELD" ON ABSCISSA SCALE, PROJECT A VERTICAL LINE UPWARD UNTIL THE DESIRED "CAISSON DIAMETER CURVE" IS INTERSECTED, TURN 90 DEGREES AND PROJECT A HORIZONTAL LINE UNTIL THE ORDINATE SCALE IS INTERSECTED.
4. READ THE REQUIRED "CAISSON DEPTH" FROM THE INTERSECTION POINT ON THE ORDINATE SCALE DEPTH SHALL BE INTERPOLATED TO THE NEAREST 3 INCH INCREMENT.
5. READ THE REQUIRED "MAIN REINFORCEMENT SIZE" FROM THE INTERSECTION POINT ON THE CAISSON DIAMETER CURVE.

VALLEY & RIDGE
γ= 115 PCF
φ= 18 DEGREES
C= 750 PSF

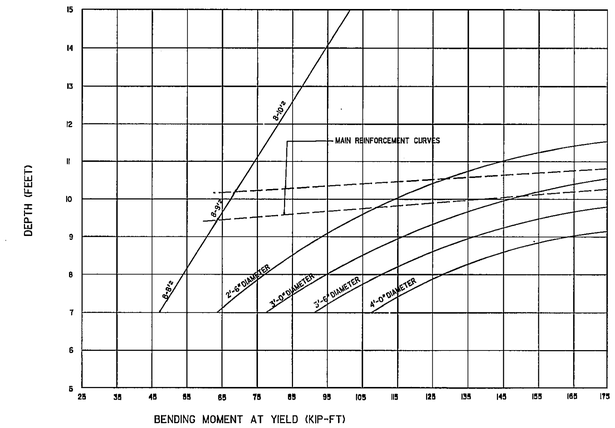

COASTAL PLAIN
γ= 120 PCF
φ= 32 DEGREES
C= 0 PCF

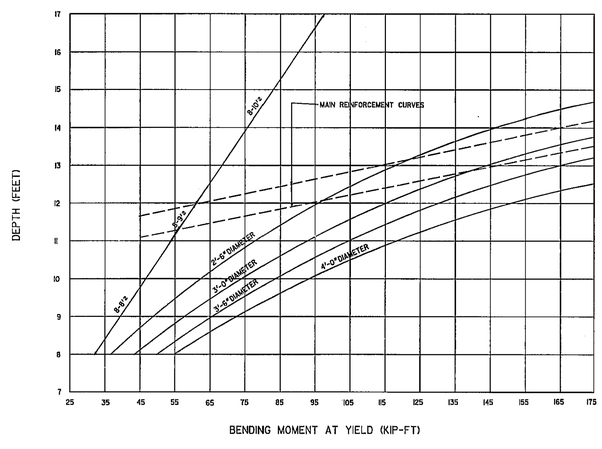

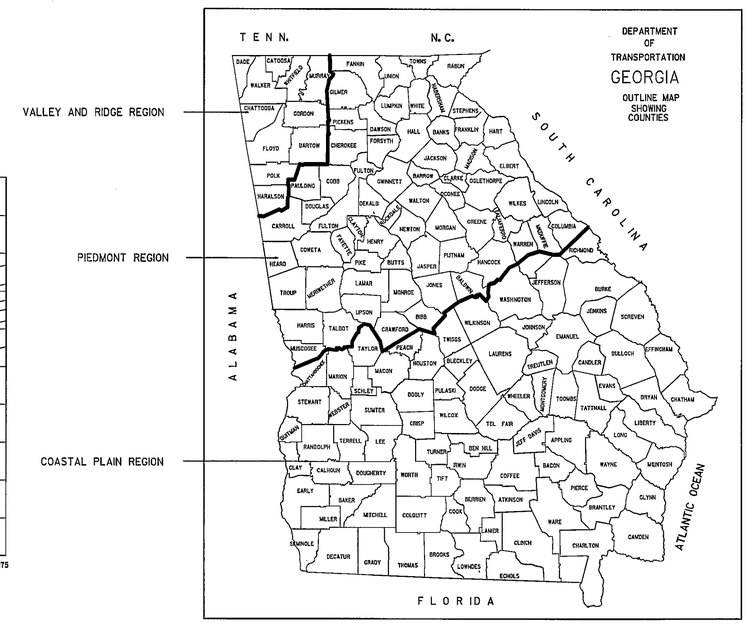

NOTE: ALL REINFORCEMENT SHALL BE PLACED AND TIED IN ACCORDANCE WITH THE STANDARD SPECS AND SPECIAL PROVISIONS. WELDING OF BAR REINF. SHALL NOT BE PERMITTED.

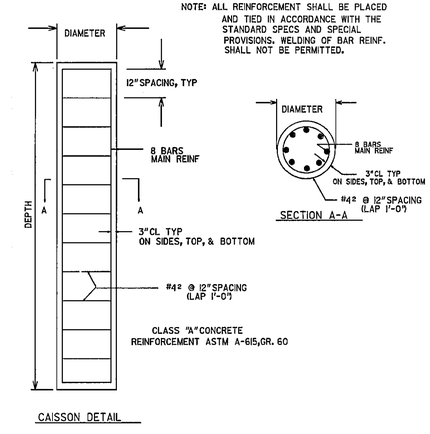

CAISSON DETAIL

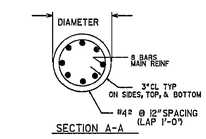

SECTION A-A

GEORGIA
DEPARTMENT OF TRANSPORTATION

-NO SCALE-

REVISION DATES		
7-09-2004		

STATE OF GEORGIA
DEPARTMENT OF TRANSPORTATION
OFFICE: TRAFFIC OPERATIONS

SIGNAL PLANS

DETAILS OF STRAIN POLE AND MAST ARM POLE FOUNDATIONS

DECEMBER 1998

DRAWING No. TS-06

3/1/2007 GPLN